

# Clean hand washer and dryer

## AHW-06A type

Possible to dry your hands with a dust free and sterile airflow by using a HEPA filter. Equipped with a hand washing function.





- High velocity blowing airflow of approx. 80 m/s.
- Reduce return airflow and splashing water by improving the shape inside the sink.
- Germicidal light turns off when it detects a person.
- Main body is coated with an antibacterial coating.

\* Patent obtained (No. 7136961)

### Reduction of the return airflow

Reduce the return airflow by balanced the exhausted airflow from the back and induced airflow.

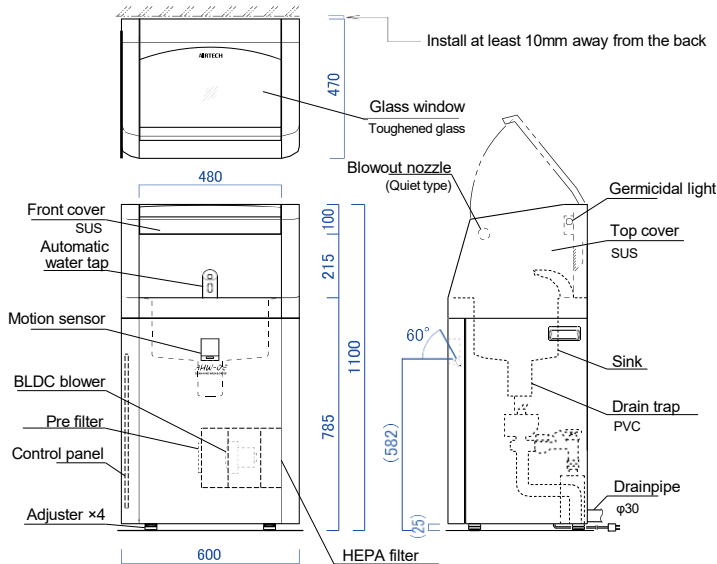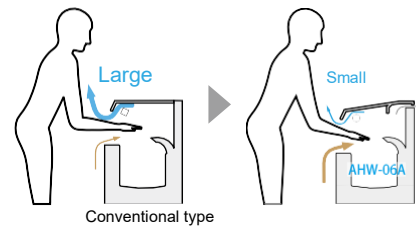

High visibility glass window



Structure for easy maintenance and inspection



Originally equipped with germicidal light



Clear operation procedure guide

### Optional extra

Automatic water soap supply tap



Electric water heater



Model	AHW-06A
Efficiency	99.99% or higher at 0.3μm particles
Filter element	Main filter: HEPA filter Pre filter: Nonwoven fabric filter
Air volume	Approx. 2.0 m <sup>3</sup> /min
Blowout air velocity	Approx. 83 m/s
Power source	AC100V 1φ 50/60 Hz
Apparent power	1350VA
Germicidal light	6W ×1
Weight	Approx. 60kg
Washing method	Automatic tap (Aqua Auto TEN40A)
Structure	Main body: Steel plate (baking finish) * Antibacterial coating Sink · inside the handwashing area: SUS

Necessary equipment	Water inlet: Flexible tube (connected with PS1/2 screws) Drainpipe: φ30mm
---------------------	--

- Note
- Be sure to connect the water tap to the water supply. (Flow switch may malfunction depending on the water quality)
  - BLDC motor life: Approx. 5000 hours
  - Be sure to leave a gap of at least 10mm between the wall and the unit when installing.