
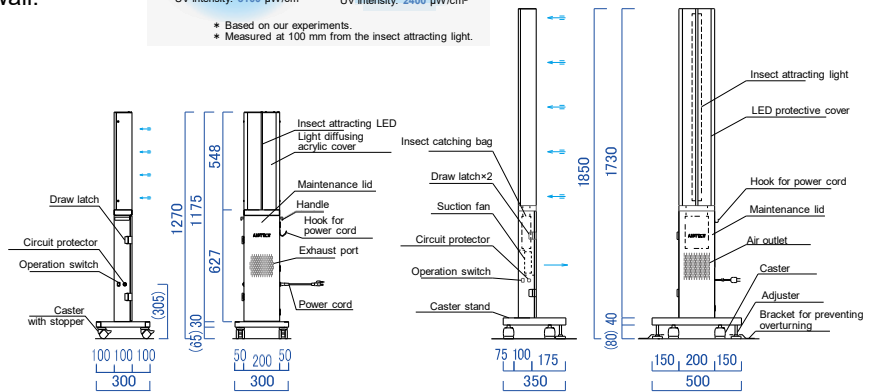


Air curtain (Suction type insect catcher)

LED bug keeper/ Bug keeper MINI

Attract insects by the LED insect attracting light and catch by the suction fan. Equipped with LED light for improved insect catching performance.

- Insect catching performance has doubled by improving UV intensity and widening irradiation angle.
- The LED insect attracting light has a rated lifetime of 20,000 hours, which is longer than a conventional light.
- Depth is 100mm and possible to install it on a wall.

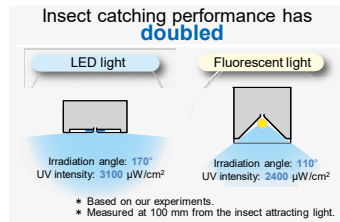

Model	ABK-1300LE	ABK-1800LE
Insect catch bag	Polyester net	
Air volume (m³/min)	Approx. 0.6	Approx. 0.8
Power source	AC100V 1φ 50/60 Hz	
Power consumption	Approx. 25W	Approx. 35W
Apparent power	Approx. 40VA	Approx. 55VA
Insect attracting light	9 balls×2	18 balls×2
Weight (kg)	Approx. 21	Approx. 23
Structure	Main body: Steel plate (baking finish)	
Accessories	Insect bag×3	Insect bag×3, Adjuster to prevent overturning×4

* Insect attracting light is a bar type LED light.

Bug shield

Suction insect catcher that is integrated with a rolling shutter.

- Prevent insects when the shutter is closed by blowing out the air sucked by the bug keeper to the left and right corners of lower edge of seat.
- Bug keeper catches the flying insects and rolling shutter prevents walking insects.
- pesticides or other chemicals are not used so there is no risk of chemical contamination of the product or people.

Model	ABS-10201Q
Insect catch bag	Polyester net
Air volume	Approx. 3 m³/min * continuous operation throughout the day
Blowout air velocity	Approx. 12 m/s
Power source	AC200V 1φ 50/60 Hz
Apparent power	Approx. 1500VA * Max. when the shutter open/close
Weight	Approx. 200 kg
Structure	Main body: Steel plate (baking finish)
Accessories	Insect bag×4 * With backflow prevention return (φ100×H150)

Rolling shutter (made by Sanwa Shutter Corporation)

Door opening/closing system	Retractable type
Material	Polyester sheet * Red
Opening/closing velocity	Opening: 2.0m/s, Closing: 0.8m/s
Safety device	Phototube sensor

* Rolling shutter is a pipeless structure and red colored

