


SS-clean booth FFU type / CP type

Short delivery time, low price, and a self setting type that can be assembled and disassembled by the customer themselves.

FFU type

Fan filter unit (FFU) is attached to the ceiling.

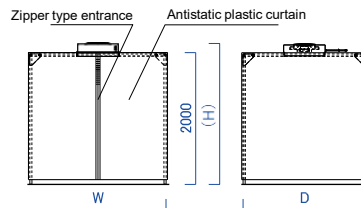


Model	W	D	(H)
SS-CB-1200F	1200	900	(2135)
SS-CB-1800F	1800	1200	(2155)
SS-CB-2000F	2000	1800	(2155)
SS-CB-2500F	2500	2000	(2160)

Unit (mm)

Model	SS-CB-1200F	SS-CB-1800F	SS-CB-2000F	SS-CB-2500F
Cleanliness class	ISO class 6 (class 1000) * inside the booth			
Air volume (m ³ /min)	Approx. 3.0/3.5	Approx. 4.5/5.4	Approx. 10	Approx. 15
Air circulation (time/h)	Approx. 83/97	Approx. 62/75	Approx. 83	Approx. 90
Filter unit	MAC- II A-31	MAC- II A-51	MAC- II A-100	MAC- II A-150
Power source	AC100V 1φ 50/60Hz			
Power consumption (W)	Approx. 29/37	Approx. 50	Approx. 98/114	Approx. 150/160
Weight (kg)	Approx. 41	Approx. 50	Approx. 59	Approx. 100
Structure: Frame	31×31 steel square pipe (baking finish)		40×40 steel square pipe (baking finish)	
	: Surrounding · Ceiling		Antistatic plastic curtain t 0.2	
Accessories	Power cord 5m with 2PE			

* SS-CB-2500F has three zipper type entrances.

- Possible to deliver within a week of receiving an order due to standardization.
- Possible to assemble it within approx. 15 min. for 2 people.
- Cheaper than conventional clean booth.
* Approx. 30% reduction

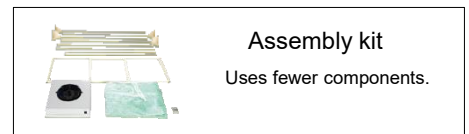

Common options for FFU and CP types



LED lighting

Possible to attach it easily



Clean monitor

Possible to measure cleanliness inside the booth within the range of ISO9~7. Equipped with magnetic mounting seat



Table + Chair

Ideal size for the space inside the booth

[Others] Thermometer, Digital clock, Floor mat, Outlet (equipped with breaker · individual switch)

CP type

Clean partition is attached to the side. * ACP-898AH



Model	SS-CB-2000CP	
Cleanliness: Air outlet	ISO class 5 (class 100)	Power consumption (W) Approx. 7~90 * Quiet ~ MAX mode
Class : Inside the booth	ISO class 6 (class 1000)	External dim. (mm) W2000×D1800×H1200
Air volume (m ³ /min)	Approx. 3.0~12.5 * Quiet ~ MAX mode	Structure Frame: 31×31 steel square pipe (baking finish)
Air circulation (time/h)	Approx. 24~103 * Quiet ~ MAX mode	Surrounding · Ceiling: Antistatic plastic curtain t 0.2
Power source	AC100V 1φ 50 / 60Hz	Accessories Power cord 5m with 2PE

* Values vary depending on the installation layout.

* Please contact us for the clean booth size

Options for CP type



It consists of a clean partition, hood, lighting, and a worktable, so possible to use CP type as a simple clean bench.